



## User guide



Follow us on Wechat  
Register for a DPVR account

[www.dpvr.net](http://www.dpvr.net)




The images in the instructions  
are for illustration purposes only  
and do not constitute a guarantee  
of the product specifications.

# Packing List

---

Device	DPVR P1/P1 PRO/P1 PRO 4K
Accessories	Charger USB cable Instructions and warranty card Lens cleaning cloth Handle

---

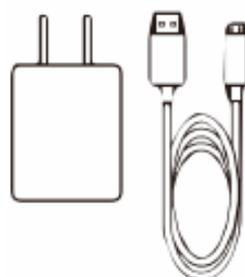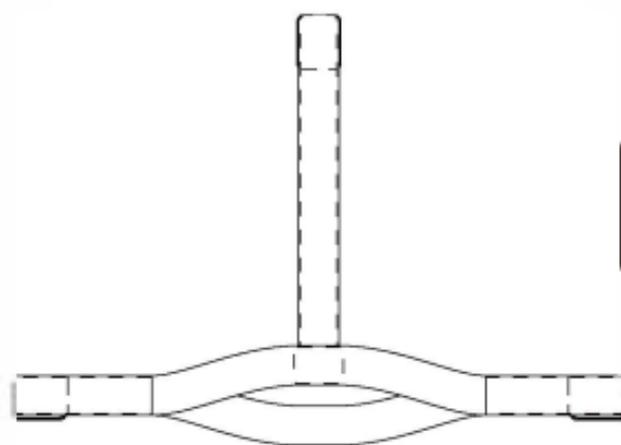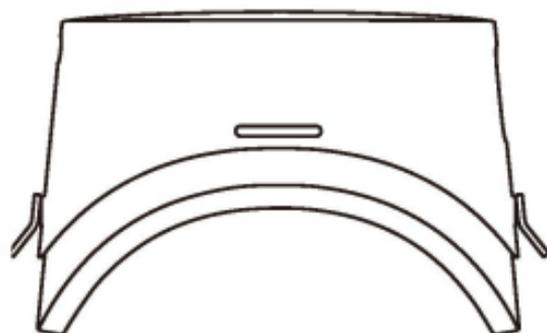


# Instructions for the buttons /ports/indicators

Head strap

Optical lenses

Optical sensing/  
Distance sensing

Touchpad

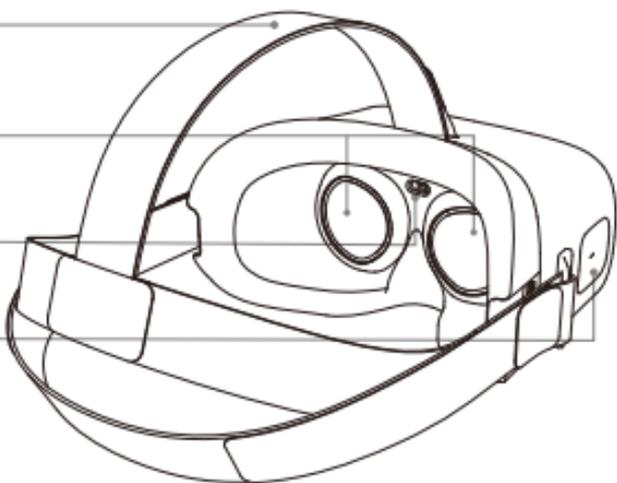

Headphone jack

Micro-USB port

Indicators


Power button

Volume buttons

Microphone

TF card slot

Return button

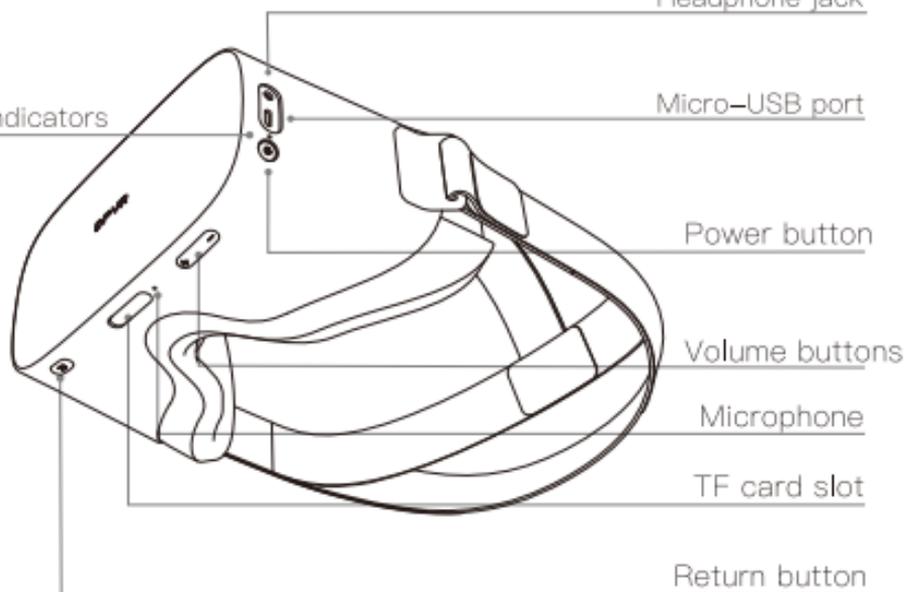





Buttons	Description		
Power button		Press and release Press and hold Press and hold for eight seconds	Standby/wake Power on/off Force power off
Return button		Press and release Press and hold for two seconds	Return to previous interface Return to Home screen
Touchpad			Slide Tap Scroll Enter
Volume buttons			Adjusting sound volume

Ports	Description	
Headphone jack		3.5mm earphone (Volume adjustment/play/pause function on the earphone cable is not supported)
Micro-USB port		Connect to the charger to charge (device does not charge when worn). Can be connected to a computer for data transfers, OTG supported
TF card slot		Open dust cover, then insert TF card as shown in the picture

Indicator status	Description
Steady blue light	Power on/Device is operating normally
Steady green light	Charging complete
Steady red light	Low battery
Steady yellow light	Device is charging

# Instructions for head strap mounting and adjustment


The head strap passes through the rings on both sides and the top respectively, and then adjust to proper fit.

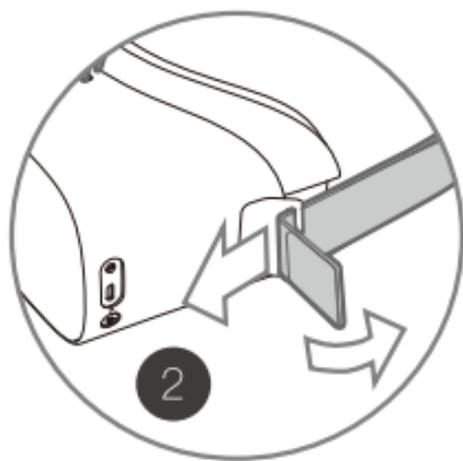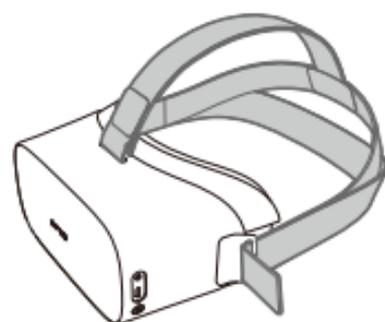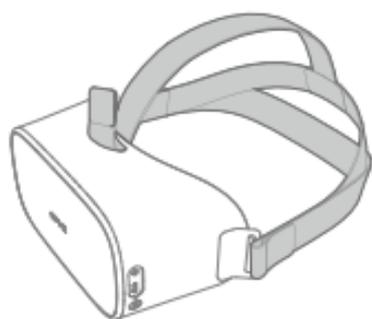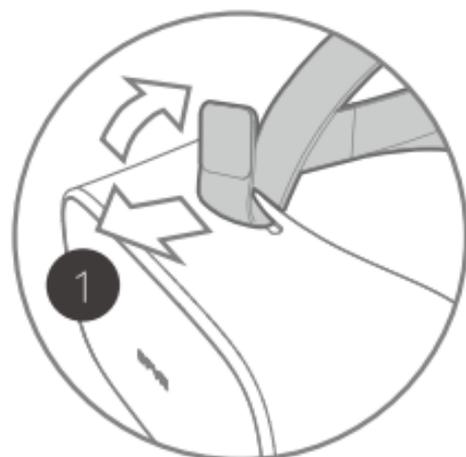


# Touchpad instructions

## Touch operations

1. Turn your head to move the screen cursor to the desired menu.
2. Tap on the touchpad with your finger.

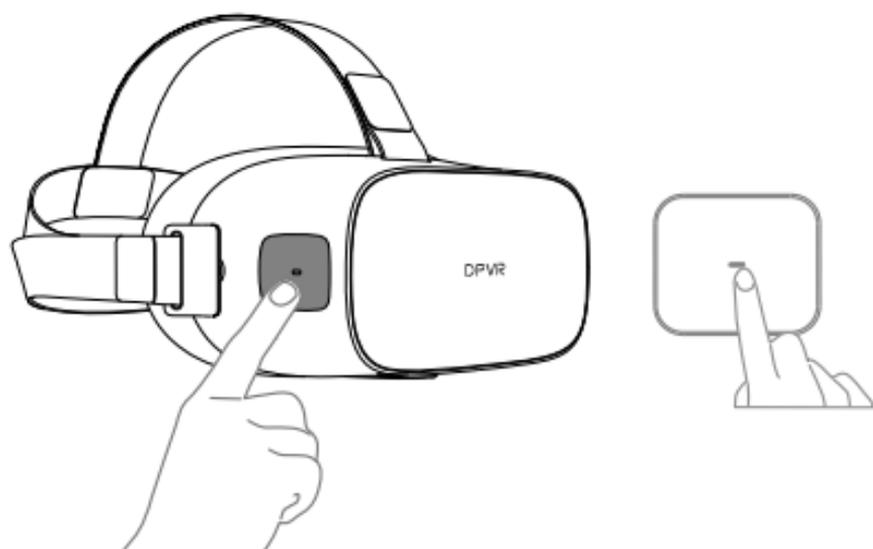


Slide left or right to turn a page

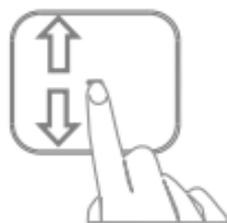

Slide up or down to look through a list

# Cursor positioning instruction


The device is capable of sensing the movements of the user's head. It is also capable of positioning to the corresponding part of the screen in accordance with head movements.

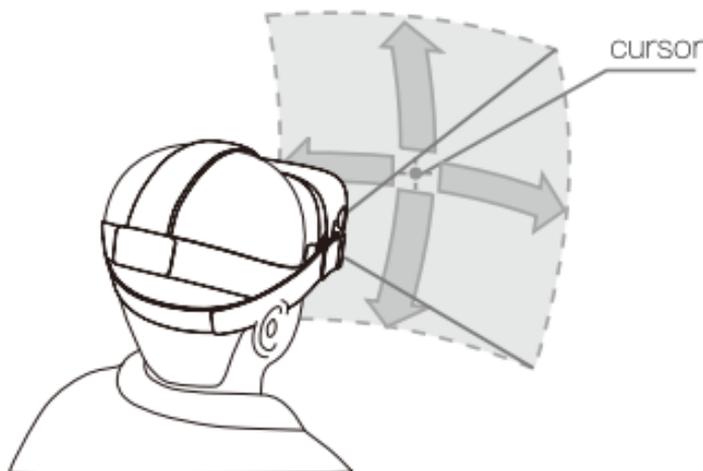

## Selection

You can choose the desired apps or items by turning your head or by using the touchpad.

1. Turning your head to move the cursor to the desired position.
2. Tap on the touchpad (on the right side of the device).

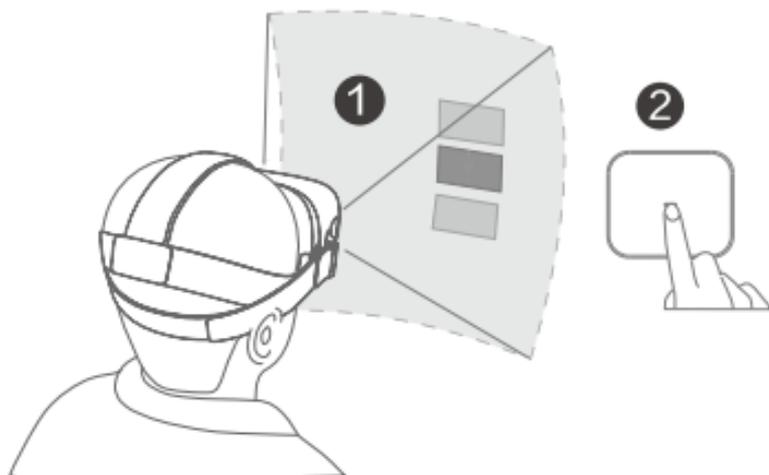


# Controller Instruction

## 1. Product overview

Product name	DPVR Bluetooth Controller
Product model	BC301
Weight	45g
Size	12mmx37mmx34mm
Connection	bluetooth
Battery	2XAAA

## 2. Key setting instruction

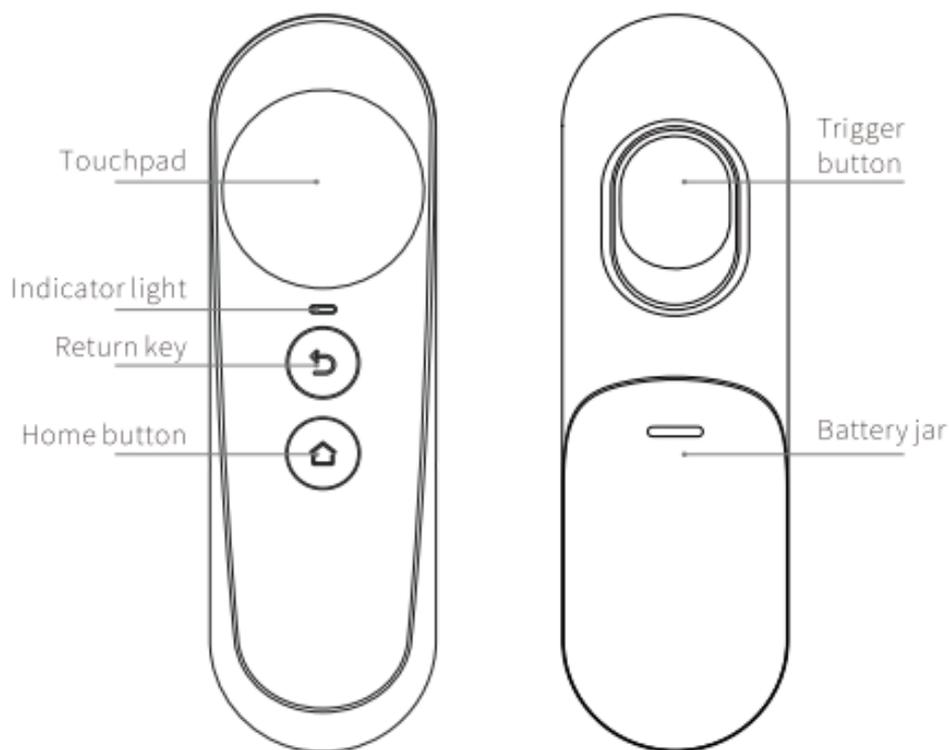

### 3. Key function description

Home button		Press the button to return to the main interface Press and hold for 2 seconds to adjust the Controller position Press and hold for 5 seconds to turn on/off the bluetooth Controller
Return key		Return to the previous menu
Touchpad		Scroll the page by sliding Click to confirm
Trigger button		Press the button to confirm

### 4. Indicator status

Boot but not connected	Indicator light flashes(Once a second)
Being connected	Indicator light keeps on
Connected successfully	Indicator light go out
Low power of controller	Indicator light flashes quickly(Twice a second)

### 5. Controller connection

- Make sure the VR headset bluetooth is enabled
- Please press and hold the return key and the home button until the VR headset successfully identifies the controller. When the controller is connected successfully, the white indicator light will go out
- Controller connection failed, the white indicator light flashes (once a second)
- If the white indicator light is off but the controller is not connected successfully, please confirm whether it is interfered by the signal from other nearby devices. After removing signal interference, try connecting again

# Safety information

Please read the following information prior to using the device to ensure your safety and the correct use of the device.

## For your safety, please adhere to the following safety precautions

- Prevent physical impact to the device from collision or drops.
- Use only manufacturer-approved chargers and accessories with the device.
- DO NOT touch the device with damp or wet hands, and do not use the device in damp conditions such as bathrooms, swimming pools or areas where you may come in contact with water while wearing the device.

## To avoid injury and prevent damage to the device, please adhere to the following safety precautions

- Do not place or store device in hot or cold locations. The recommended usage and storage environment temperature should be between 0°C and 30°C.
- Charging the device at ambient temperatures below 0 degrees Celsius or above 30 degrees Celsius may cause damage
- When the device is not in use, store it in a cool, dry place. Do not expose the lens to direct sunlight or strong light sources to prevent screen burns.
- Keep the device dry. Do not use the device outdoors in damp weather or rain.
- To prevent hearing impairment, do not use earphones or headphones at high volume for extended period of time.
- Not recommended for use by children under 13 years of age. Children under 13 and adults over 65 years old need proper guidance to limit duration and ensure rest time.